

MOVENTO



769R – Heavy Duty Bottom Mount Runners


Application






Description

- Pre-assembled bottom mount set
- MOVENTO heavy duty full extension concealed runners with BLUMOTION
- 13 (1/2") to 16 (5/8") drawer side thickness
- 19 (3/4") over extension
- For face frame and frameless applications
- Tool-free side-to-side, height and tilt adjustment
- Maximum 6 (1/4") cabinet bottom recess
- **135 lb static load capacity**
- Designed to be used with SERVO-DRIVE or TIP-ON BLUMOTION touch-to-open feature

Basic Components

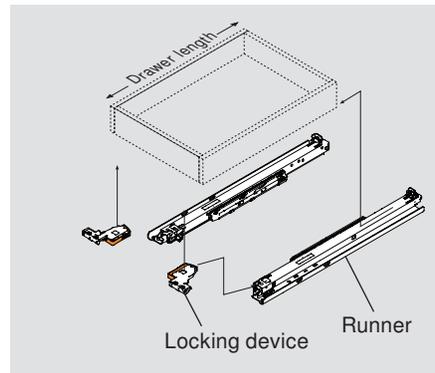


Applications

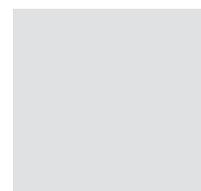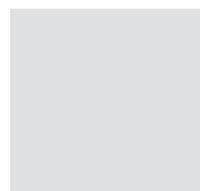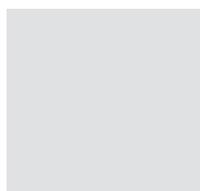

Components

MOVENTO bottom mount runner set

One set required per drawer

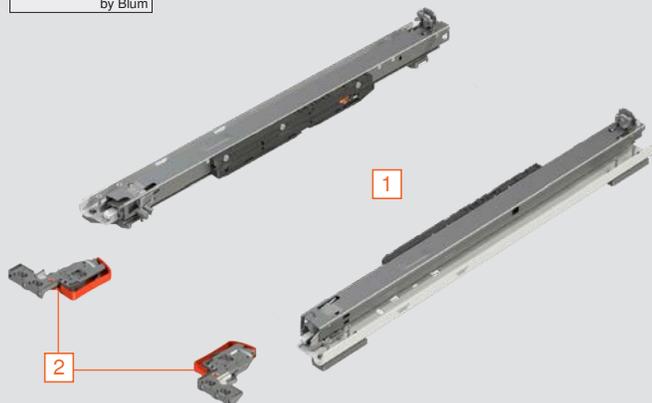

Set includes:

- 1 MOVENTO heavy duty runner set with pre-mounted #6 x 1" wood screws for installation (qty 8)
 - 2 Standard locking device (qty 2) with #6 x 5/8" wood screws for installation (qty 4)
- Installation instructions

Interior roll-outs and roll-out shelf applications must be mounted to the bottom of the cabinet or to a fixed shelf/panel.

Overall cabinet depth	Drawer length	MOVENTO set
610 (24")	533 (21")	769R5330S


NOTE: These runners are for 13 (1/2") to 16 (5/8") drawer side thickness

NOTE: Pre-attached 1/4" spacers should not be removed. Cabinet bottom recess must be 6 (1/4") or less.

Drawer insertion


Extend the concealed runners fully. Place the drawer on the runners and close.

The locking devices automatically engage with the runners. Make adjustments if necessary.

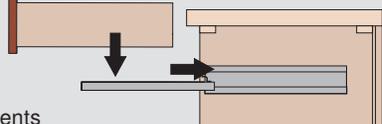

Drawer removal


- 1 Squeeze orange handles on locking devices.
- 2 Pull drawer straight out and up.

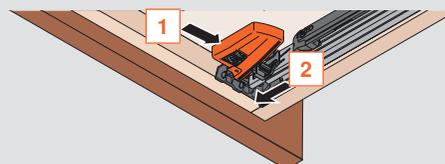

Drawer and Cabinet Specifications

Drawer box specifications

Front view

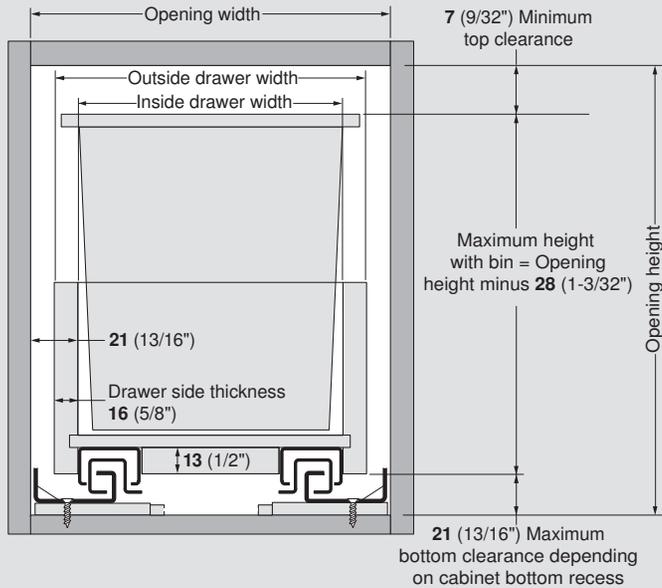

NOTE: Drawer side material thickness may vary. Accurate measurement of drawer side material thickness should be used when calculating outside drawer width using the table below. Inside drawer width **must** equal opening width minus **42 (1-21/32)** for MOVENTO runners to align and function optimally.

Calculating outside drawer width


For drawer side thickness	16 (5/8")	15 (19/32")	13 (1/2")	12 (15/32")
Deduct from opening width	10 (13/32")	12 (15/32")	16 (5/8")	18 (23/32")

Example: For 21" opening width and a 5/8" thick drawer, 21" minus 13/32" = 20-19/32" drawer width

NOTE: T59.K010M spacers, available separately, required for 15/32" and 1/2" thick sub-fronts only. See pg 8 in the MOVENTO brochure.

Drawer back preparation

Rear view

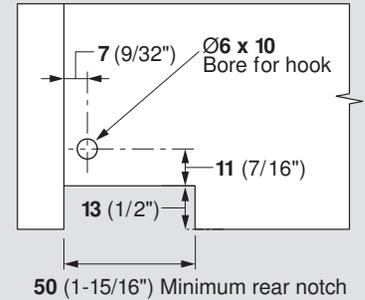

Runner comparison

Side view

769R – No vertical profile




769. – Vertical profile



Runner mounting specifications

Top view

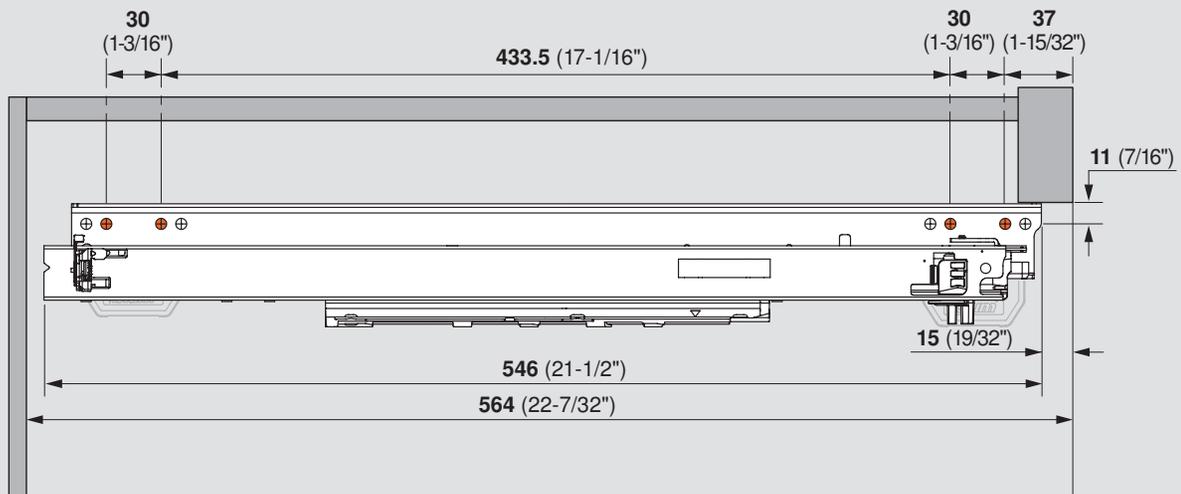

NOTE: Orange dots indicate pre-mounted screw locations. All four are required to meet specified load capacities.